

**TORQUE SPECIFICATIONS**

DESCRIPTION	N·m	Ft. Lbs.	In. Lbs.	COMMENTS
Camshaft Position Sensor Bolt	9	—	80	
Ignition Coil fasteners	8	—	71	
Spark Plugs	20	15	—	
Ignition Coil Capacitor Bolt	10	—	89	
Knock Sensor	22	16	—	Do not reuse fastener. If removed, a new fastener must be installed and tightened to specifications
Variable Valve Timing Solenoids	4	—	35	