


## REMOVAL AND INSTALLATION

### REMOVAL


1. Carefully pry upward at base of shifter boot (2) with a suitable trim tool to free boot from floor console (1).

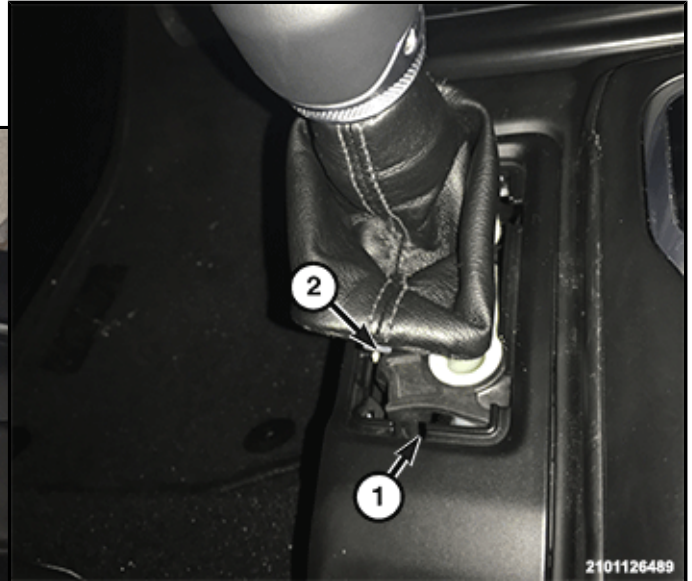

2. Slide boot upwards to expose the shifter handle bolt (1). Remove the shifter handle bolt and remove the shifter handle.
3. Grab the shifter handle where it meets the boot and gently twist to unlock the handle. Transfer the boot to the new handle.

### INSTALLATION

1. Install the shifter handle on the shift lever and install the bolt. Tighten the bolt to the proper (Torque Specifications).

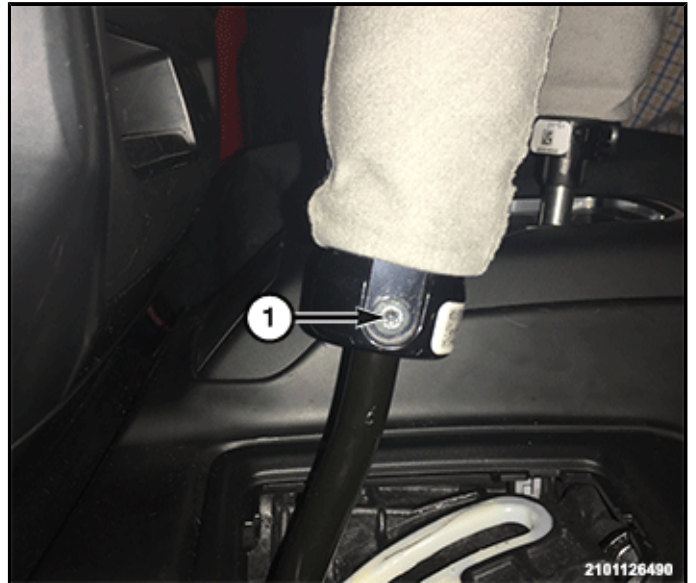

2. Install the shifter boot (2) back in the channel in the floor console (1), firmly press around the base of the shifter boot to seat clips.

