


## CARRIER PLATE


### REMOVAL

1. Remove the exterior handle ([Refer to 23 - Body/Door - Front/HANDLE/Removal and Installation](#)).
2. Remove the lock cylinder, if equipped ([Refer to 23 - Body/Door - Front/CYLINDER, Door Lock/Removal and Installation](#)).
3. Remove the handle gasket.
4. Loosen the exterior handle support screw but do not remove it.
5. Release the bracket hook from the outer panel and slide the handle bracket forward.

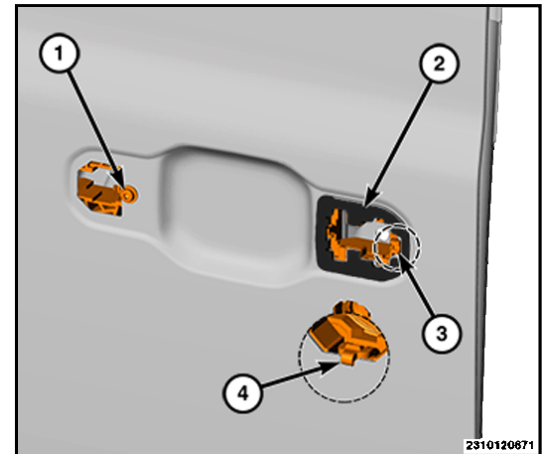


- 1 - Exterior Handle Support Screw
- 2 - Handle Gasket
- 3 - Bracket Hook
- 4 - 2nd Hook

6. Remove the front door trim panel ([Refer to 23 - Body/Door - Front/PANEL, Door Trim/Removal and Installation](#)).
7. Open the access plugs and position aside.
8. Remove the window motor and lower the window until the glass fasteners are visible in both access holes ([Refer to 08 - Electrical/Power Windows/MOTOR, Window Regulator/Removal and Installation](#)).

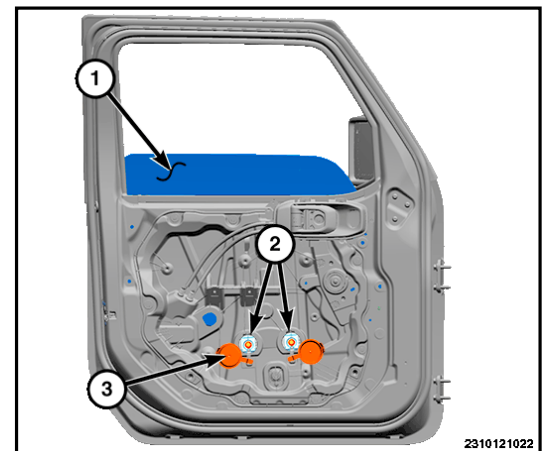

- 1 -Window
- 2 - Access Holes
- 3 - Access Plug


9. Loosen the glass fasteners.

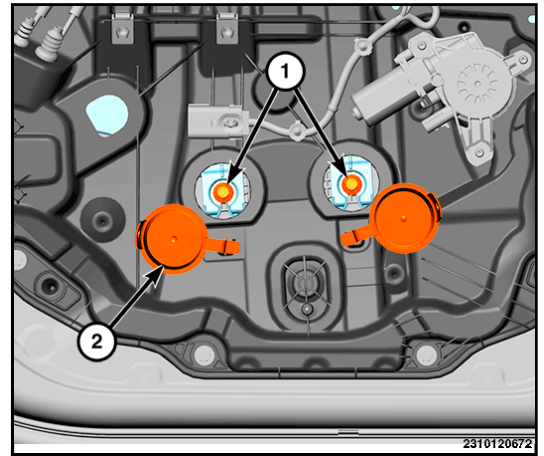

1 - Fasteners

2 - Access Plug


10. Using a hook-type tool or equivalent, release the lower glass tabs from the regulator lift plates.
11. Secure the window glass into place with a wedge or tape.

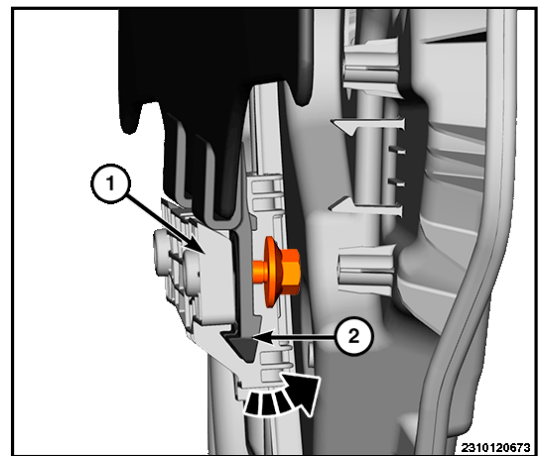

1 - Regulator Lift Plate


2 - Lower Glass Tabs

12. Disconnect the power mirror wire harness connector.

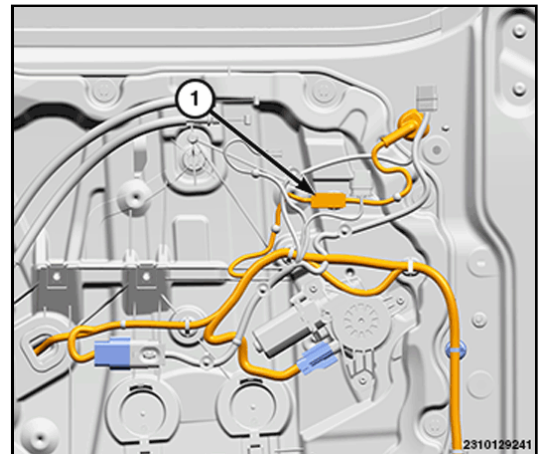

1 - Power Mirror Wire Harness

13. Remove the front door latch mounting screws.

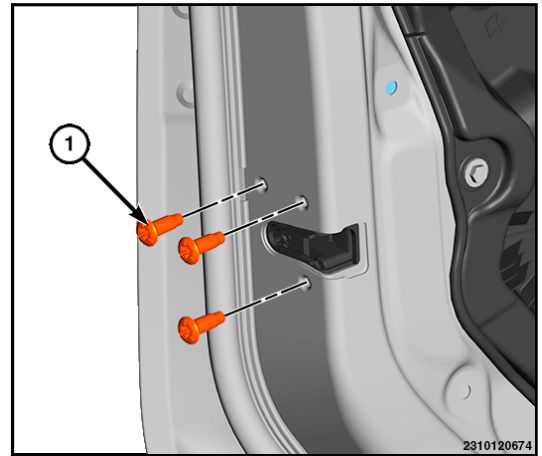


1 -Front Door Latch Mounting Screws

14. Using a trim stick, release and remove the wiring cover.



1 - Wire Cover

15. Disconnect the wire harness connector and release the wire harness from the support bracket.

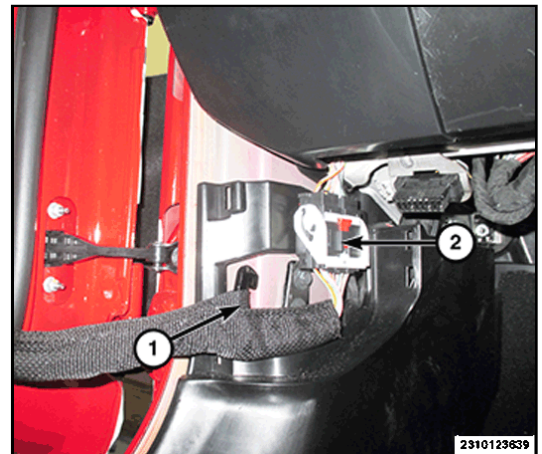


1 -Support Bracket

2 - Wire Harness Connector

16. Release the harness support clips.

17. Remove the screws from the front door wire harness bracket from the front of the door.

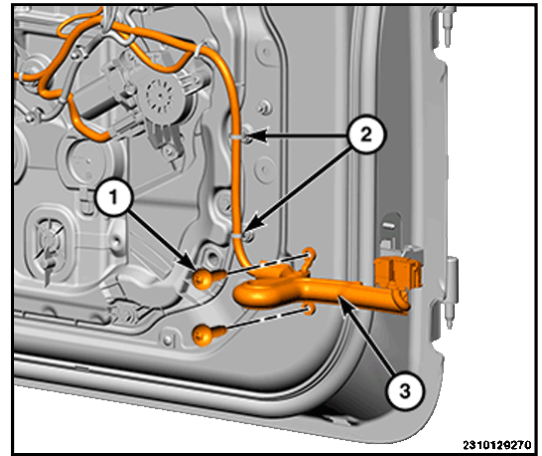


- 1 - Screw
- 2 - Support Clips
- 3 - Front Door Wire Harness

18. Remove the carrier plate assembly bolts and separate the carrier plate assembly from the door.
19. Move the assembly forward in the door and remove the latch assembly from the door interior and remove the carrier plate.


## INSTALLATION

Follow the removal procedure in reverse for general reassembly of the components on the vehicle. The steps listed below are calling out specific procedures that should be followed during installation.

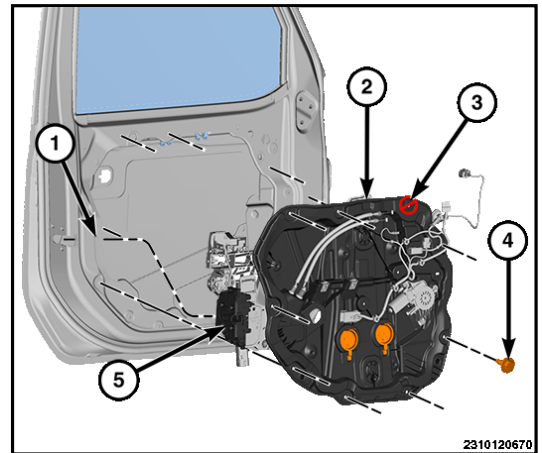

- 1 - Door Interior
- 2 - Carrier Plate Assembly
- 3 - This bolt hole is a locator used during the trim panel removal and installation. (Do Not Add Bolt.)
- 4 - Carrier Plate Assembly Bolts
- 5 - Latch Assembly

- Do not add a bolt to hole. This bolt hole is a locator used during the trim panel removal and installation.

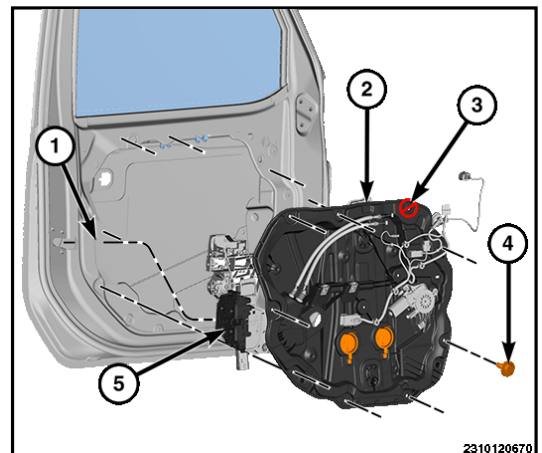

- 1 - Door Interior
- 2 - Carrier Plate Assembly


3 - This bolt hole is a locator used during the trim panel removal and installation. (Do Not Add Bolt.)

4 - Carrier Plate Assembly Bolts

5 - Latch Assembly

---

- Install the door latch bolts and tighten to the proper [\(Torque Specifications\)](#).
- Position the door glass and secure it to the window regulator glass sliders, making sure the glass and lift plates are properly seated.
- Tighten the door glass bolts to the proper [\(Torque Specifications\)](#).
- Engage the exterior handle support screw into the slot of the outer panel and engage the bracket hook over the edge of the outer panel.
- Engage the 2nd hook onto the outer panel at the key cylinder hole.
- While pushing the bracket hook rearward, tighten the exterior handle support screw to the proper [\(Torque Specifications\)](#).

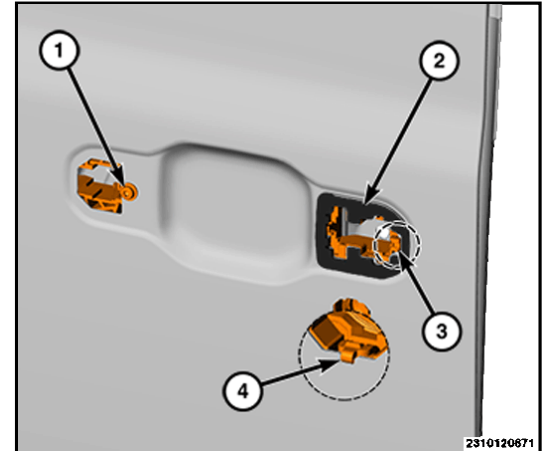

1 - Exterior Handle Support Screw

2 - Handle Gasket

3 - Bracket Hook

4 - 2nd Hook

---