


## DOOR TRIM PANEL

 **Special Tools:** Click to display a list of tools used in this procedure

### REMOVAL

1. Using a standard window handle tool, release the handle clips and remove the handle from the window lift mechanism, if equipped with a manual regulator.

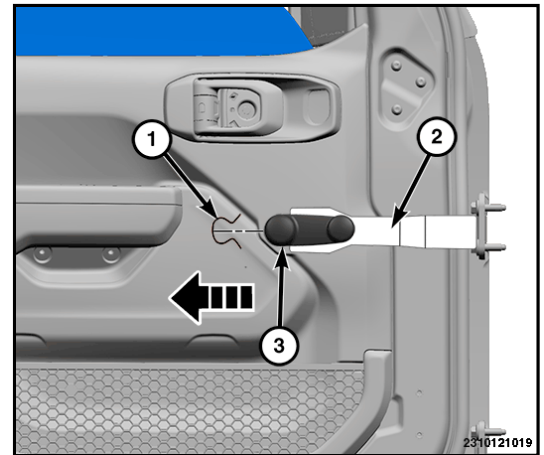


1 - Handle Clip

2 - Window Handle Tool

3 - Handle


2. Using a small pick type tool or equivalent at the slot, remove the trim cover.
3. Remove the door interior handle bolt.

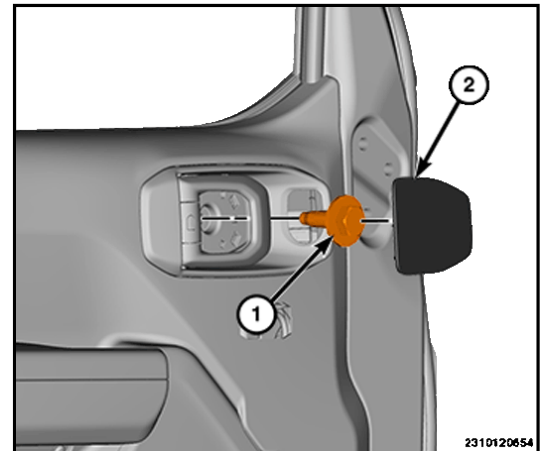

1 - Door Interior Handle Bolt

2 - Trim Cover


4. Remove the lower screws.
5. Remove the armrest bolts.

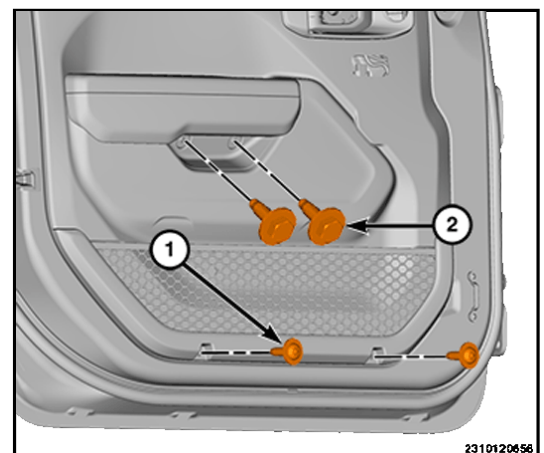

1 - Lower Screw


2 - Armrest Bolt

6. Using special tool [Remover, Trim C-4829A](#) , separate the push pin fasteners.

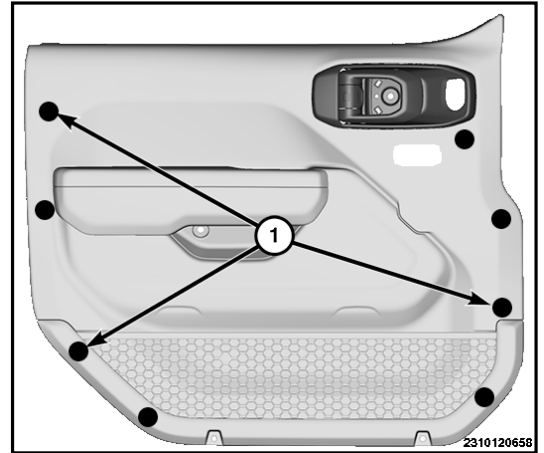

1 - Push Pin Fasteners

7. Separate the trim panel assembly from the door.

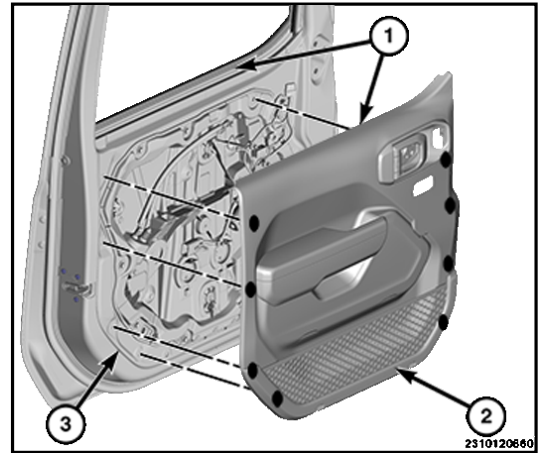


1 - Door

2 - Trim Panel Assembly

3 - Inner Door

8. Disconnect the wire harness connectors as necessary.

9. Disconnect the interior handle cables and remove the barrel end from the interior handle.

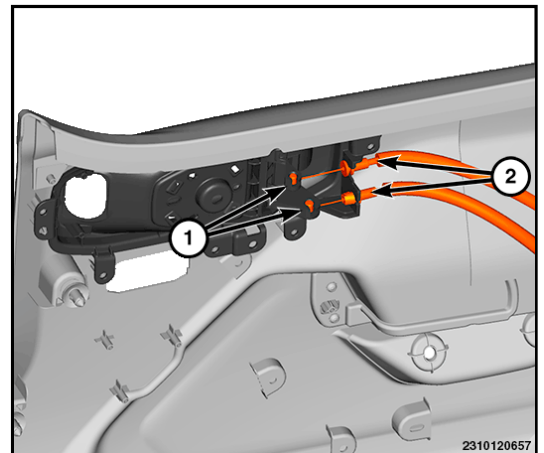

1 - Cable Barrel Ends

2 - Interior Handle Cables

**NOTE:** Prior to installing the door trim panel, replace any trim panel retaining clips that may have been damaged during the removal process.

## INSTALLATION

Follow the removal procedure in reverse for general reassembly of the components on the vehicle. The steps listed below are calling out specific procedures that should be followed during installation.

- Install the armrest bolts and tighten to the proper [\(Torque Specifications\)](#).
- Install the door interior handle bolt under handle trim cover and tighten to the proper [\(Torque Specifications\)](#).