

## REMOVAL AND INSTALLATION


### REMOVAL

1. Remove the glove box ([Refer to 23 - Body/Instrument Panel/GLOVE BOX, Instrument Panel/Removal and Installation](#)).
2. Position the glove box on a bench. Insert the key into the glove box lock cylinder and rotate to the unlocked position.



3. Lift the glove box handle (1) and insert a straight pick tool into the slot (2) pushing in on the lock cylinder release tab.

**NOTE:** The last image in the removal procedure will reference the lock cylinder release tab.

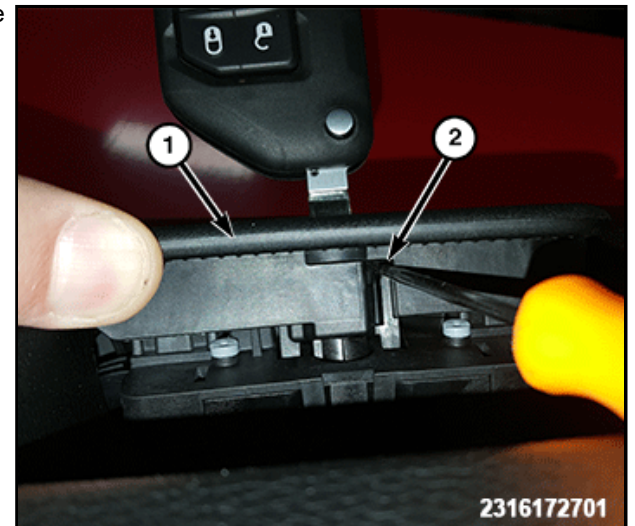


4. While holding the lock cylinder release tab down with the pick tool, rotate the key counterclockwise.



5. Remove the tool and pull up on the key. The glove box lock cylinder will come out of the handle with the key.

**NOTE:** The lock cylinder release tab (1).

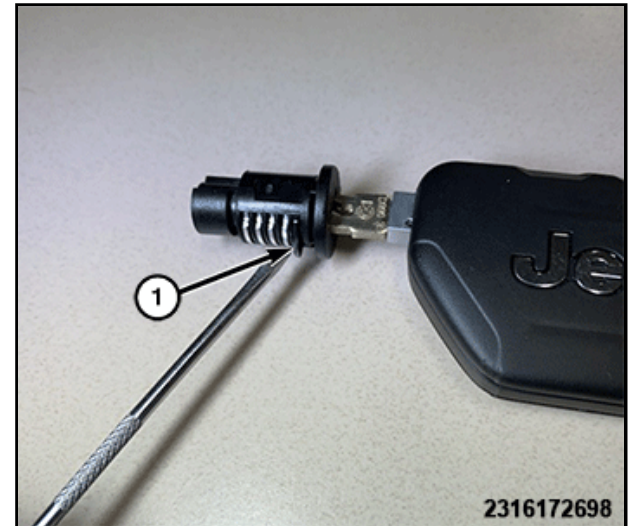

## INSTALLATION

1. With the key inserted in the lock cylinder, position the lock cylinder into the glove box handle.
2. With the glove box cylinder fully inserted into the glove box handle, rotate key clockwise and remove the key.



3. Install the glove box ([Refer to 23 - Body/Instrument Panel/GLOVE BOX, Instrument Panel/Removal and Installation](#)).