


JEEP WRANGLER PICKUP (JT)

NOTE: Refer To Battery Disconnect / Connect Procedure Prior To

| FUSES | | | |
|-------|-----------|--|----------|
| Fuse | Alternate | Description | Amperage |
| F02 | - | STARTER | 40A |
| F03 | - | INTELLIGENT BATTERY SENSOR (IBS) | 5A |
| F04 | - | FUEL PUMP MTR / FPCM | 20A |
| F05 | - | SECURITY GATEWAY | 5A |
| F08 | - | TRANS CONTROL MODULE TCM-8HP CYGNUS | 15A |
| F10 | - | KEY IGNITION NODE (KIN)/RADIO FREQUENCY HUB (RF HUB)/ELECTRIC STEERING COLUMN LOCK (ESCL) | 15A |
| F11 | - | UCI PORT (USB & AUX) | 10A |
| F12 | - | HIFI AMPLIFIER | 25A |
| F15 | - | INSTRUMENT PANEL CLUSTER (IPC)/SWITCH BANK HEAVY DUTY ELECTRICAL PKG (SWITCH BANK-HD ELEC) | 15A |
| F18 | - | AIR CONDITIONING CLUTCH (AC CLUTCH) | 10A |
| F20 | - | CENTRAL BODY CONTROLLER (CBC) 1-INTERIOR LIGHTS | 30A |
| F22 | - | ENGINE CONTROL MODULE (ECM)/POWERTRAIN CONTROL MODULE (PCM) | 10A |
| F23 | - | POWERTRAIN CONTROL MODULE (PCM)/ENGINE CONTROL MODULE (ECM) | 10A |
| F25 | - | MODULE SHIFT BY WIRE (MOD_SBW) | 10A |
| F26 | - | CENTRAL BODY CONTROLLER (CBC) 2-EXTERIOR LIGHTS #1 | 40A |
| F27 | - | FRONT WIPER | 30A |
| F28 | - | CENTRAL BODY CONTROLLER (CBC) 3 - POWER LOCKS | 40A |
| F29 | - | CENTRAL BODY CONTROLLER (CBC) 4 - EXTERIOR LIGHTS #2 | 40A |
| F31 | - | DIAGNOSTIC PORT | 10A |
| F32 | - | HEATING VENTILATION AIR CONDITIONING MOD (HVAC CTRL MOD)/STEERING COLUMN LOCK (SCL)/OCCUPANT CLASSIFICATION MODULE (OCM)/DRIVER PRESENCE DETECTION MODULE (DPDM) | 10A |
| F33 | - | PARKTRONICS SYS TEM (PTS)/INFRARED CAMERA MODULE (IRCM)/AIRBAG DISABLE LAMPS (AIRBAG DISABLE LMPs) | 10A |
| F34 | - | ELECTRONIC STABILITY CONTROL (ESC)/ELECTRIC HYDRAULIC POWER STEERING (EHPS)/SMART BAR CONTROL MODULE (SBCM) WAKE UP | 10A |
| F35 | - | BRAKE VAC PMP - IF EQUIPPE D | 30A |
| F36 | - | TRAILER TOW MOD - IF EQUIPPE D | 30A |
| F37 | - | TRAILER TOW CONN 7W - IF EQUIPPE D | 30A |
| F38 | - | ENGINE CONTROL MODULE ECM | 20A |
| F40 | - | DRIVETRAIN CONTROL MODULE (DTCM)/AXLE LOCK (AXLE LOC) FT_RR | 15A |
| F41 | - | INSTRUMENT CLUSTER (IC)/SECURITY GATEWAY (SGW) WAKE UP | 15A |
| F42 | - | POWER CONTROL RELAY CONTROL FEED (ELECTRIC STOP/START) | 10A |
| F44 | - | INFRARED CAMERA (IRCAM) HEATERS | 10A |
| F46 | - | AUTO HDLP LVL MOD/LVL MTR/HDLP SW | 10A |
| F49 | - | OCCUPANT RES TRAI NT CONTROLLER (ORC) | 10A |
| F50 | - | HD ACC - IF EQUIPPE D | 10A |
| F51 | - | HUMIDITY LIGHT RAIN SENSOR (HLRS)/INVERTER 400W WAKE UP/USB/INSIDE REARVIEW MIRROR (ISRVM)/COMPASS MODULE (CSGM) | 10A |
| F52 | - | CIGAR LIGHTER | 20A |
| F53 | - | WIRELESS SPEAKE R - IF EQUIPPE D | 10A |
| F55 | - | CENTRAL VISION PROCESS ING MODULE (CVPM) OR PARKTRONICS MODULE | 10A |
| F56 | - | IN-CAR TEMP SENSOR / PTC HEATER COIL FEED | 10A |
| F57 | - | FRT DRVR HTD SEAT | 20A |
| F58 | - | FRT PASS HTD SEAT | 20A |
| F60 | - | COMFORT STEERING WHEEL MODULE (CSWM) (HTD STR WHEEL) | 15A |
| F61 | - | LEFT BLIND SPOT SENSOR (LBSS)/RIGHT BLIND SPOT SENSOR (RBSS) | 10A |
| F63 | - | OCCUPANT RES TRAI NT CONTROLLER (ORC) | 10A |
| F65 | - | POWER INVERTER 400W | 50A |
| F66 | - | HVAC BLOWER MTR FRT | 40A |
| F70 | - | INJ /IGN COIL (GAS)/GLO PLUG MOD (DSL) | 25A |
| F72 | - | HD ELEC ACC PKG - IF EQUIPPE D | 10A |
| F76 | - | ECM (GAS)/PCM (DSL) | 20A |
| F77 | - | HEATED MIRRORS | 10A |
| F79 | - | SMART BAR CTRL MOD | 20A |
| F80 | - | POWERTRAIN CONTROL MODULE (PCM)/SOLENOID 1 2 BLOCK SHIFT | 15A |

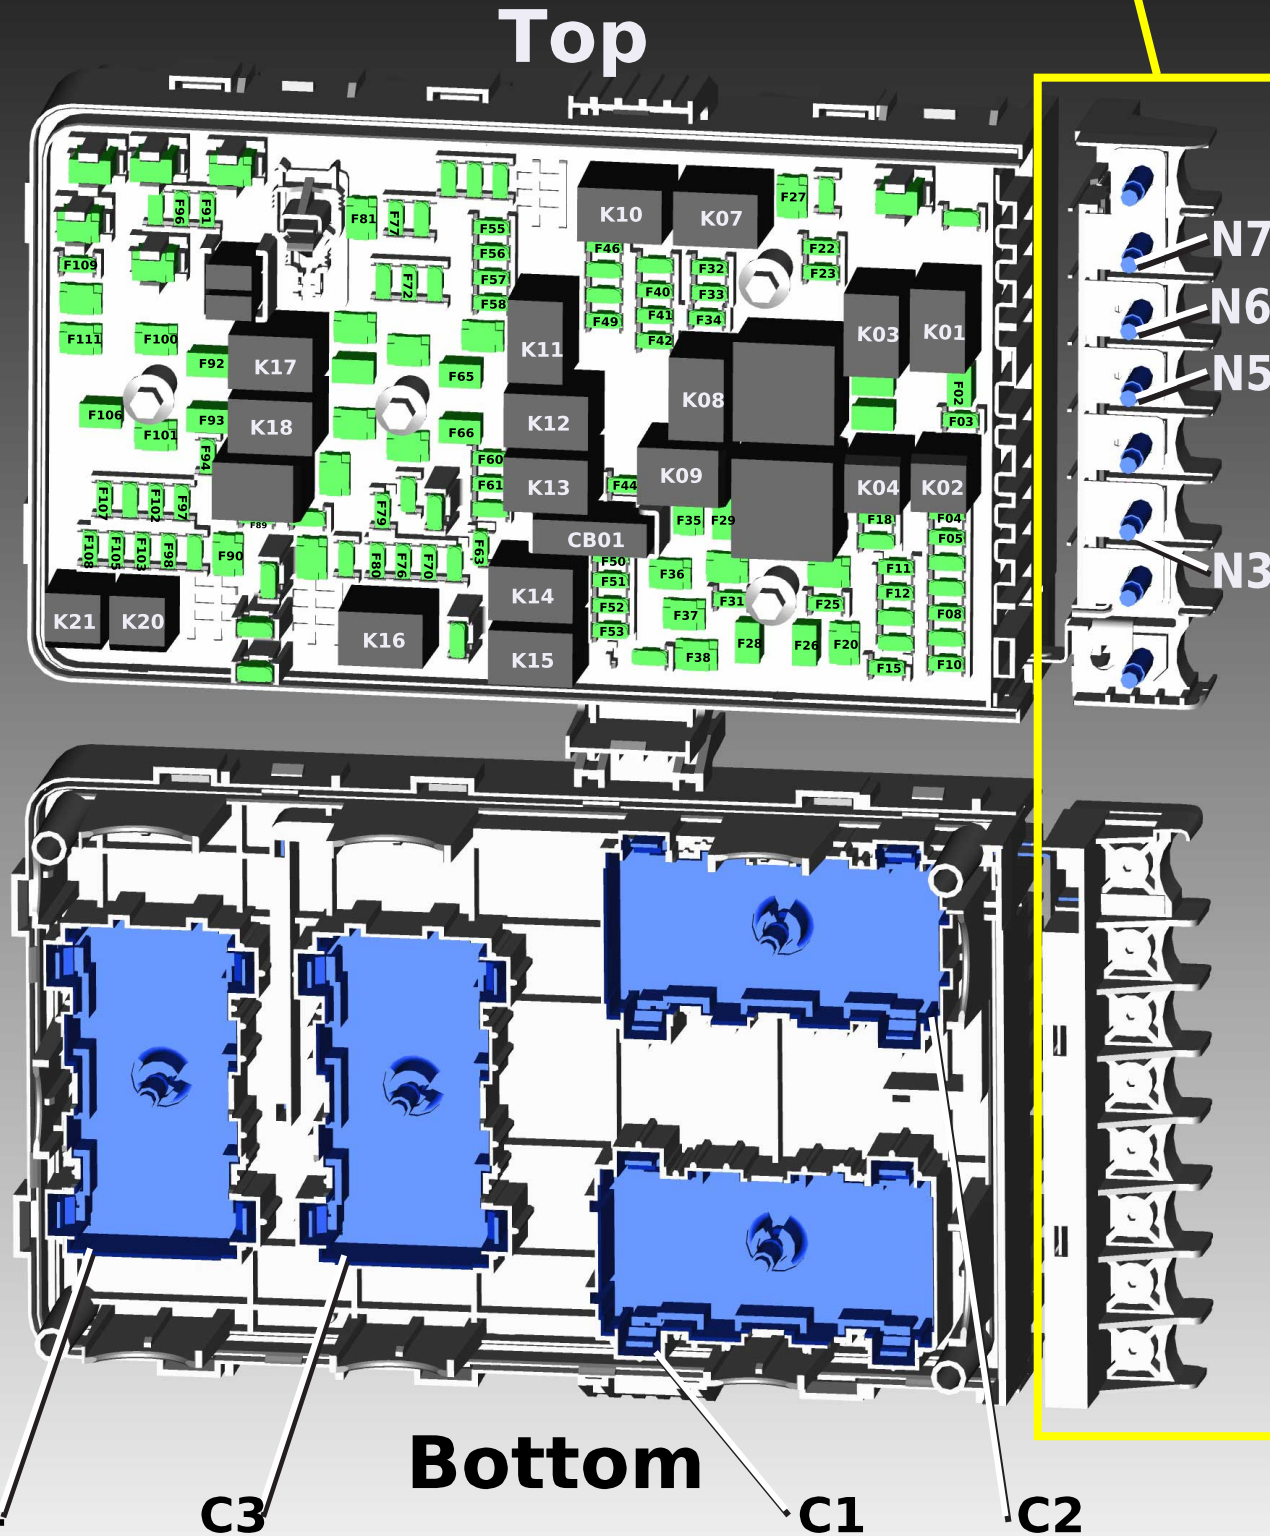

| FUSES | | | |
|-------|-----------|--|----------|
| Fuse | Alternate | Description | Amperage |
| F81 | - | REAR DEFROSTER (EBL) | 30A |
| F89 | - | STEERING COLUMN CONTROL MODULE (SCCM)/CRUISE CONTROL (CRUISE CTL)/DIGITAL TV (DTV)/AIRBAG DISABLE LAMP | 10A |
| F90 | - | TRAILER TOW PARK LMP - IF EQUIPPE D | 20A |
| F91 | - | HORN | 20A |
| F92 | - | HD ACCY #2-IF EQUIPPE D | 40A |
| F93 | - | HD ACCY #1-IF EQUIPPE D | 40A |
| F94 | - | TIRE PRESS URE MONITOR (TPM)/RF HUB SYS TEM (CORAX) | 10A |
| F96 | - | PWR MIRROR SW | 10A |
| F97 | - | RADIO / TBM | 20A |
| F98 | - | SWITCH BANK - HD ELEC/OFF ROAD | 10A |
| F100 | - | ESC - ECU & VALVES | 30A |
| F101 | - | DRIVETRAIN CONTROL MODULE (DTCM) | 30A |
| F102 | - | DUAL USB PORT | 15A |
| F103 | - | HD ACCY #3-IF EQUIPPE D | 15A |
| F105 | - | INTEGRATED CENTER STACK (ICS)/HEAT VENTILATION AIR CONDITIONING (HVAC) | 10A |
| F106 | - | ELECTRONIC SPEE D CONTROL (ESC)/PUMP MTR | 50A |
| F107 | - | TRAILER TOW STOP/TURN LT - IF EQUIPPE D | 20A |
| F108 | - | HD ACCY #4-IF EQUIPPE D | 15A |
| F109 | - | TRAILER TOW STOP/TURN RT - IF EQUIPPE D | 20A |
| F111 | - | TRAILER TOW BACKUP - IF EQUIPPE D | 20A |
| N3 | - | POWER CONTROL RELAY | 150A |
| N5 | - | RADIATOR FAN | 100A |
| N6 | - | EHP5 | 125A |
| N7 | - | ALTERNATOR | 300A |

| RELAYS | | | |
|--------|-----------|---------------------------|----------|
| Relay | Alternate | Description | Amperage |
| K01 | D879B | STOP / START | N/A |
| K02 | D823 | FUEL PUMP | N/A |
| K03 | D879A | STARTER SOLENOID | N/A |
| K04 | D819 | A/C CLUTCH | N/A |
| K07 | D839 | WIPER ON / OFF | N/A |
| K08 | D89B | RUN / START | N/A |
| K09 | D275A | BRAKE PUMP 1 | N/A |
| K10 | D835 | WIPER HIGH / LOW | N/A |
| K11 | D842B | RUN 2 | N/A |
| K12 | D876 | HVAC BLOWER MOTOR (FRONT) | N/A |
| K13 | D842A | RUN 1 | N/A |
| K14 | D851A | RUN / ACCESSORY 1 | N/A |
| K15 | D851B | RUN / ACCESSORY 2 | N/A |
| K16 | D820 | AUTO SHUT DOWN | N/A |
| K17 | R0107 | AUXILIARY 2 | N/A |
| K18 | R0106 | AUXILIARY 1 | N/A |
| K20 | R0108 | AUXILIARY 3 | N/A |
| K21 | R0109 | AUXILIARY 4 | N/A |

| CIRCUIT BREAKERS | | | |
|------------------|-----------|--------------|----------|
| CB | Alternate | Description | Amperage |
| CB01 | - | POWER WINDOW | 25A |

Power Distribution Center (F)