HORNS

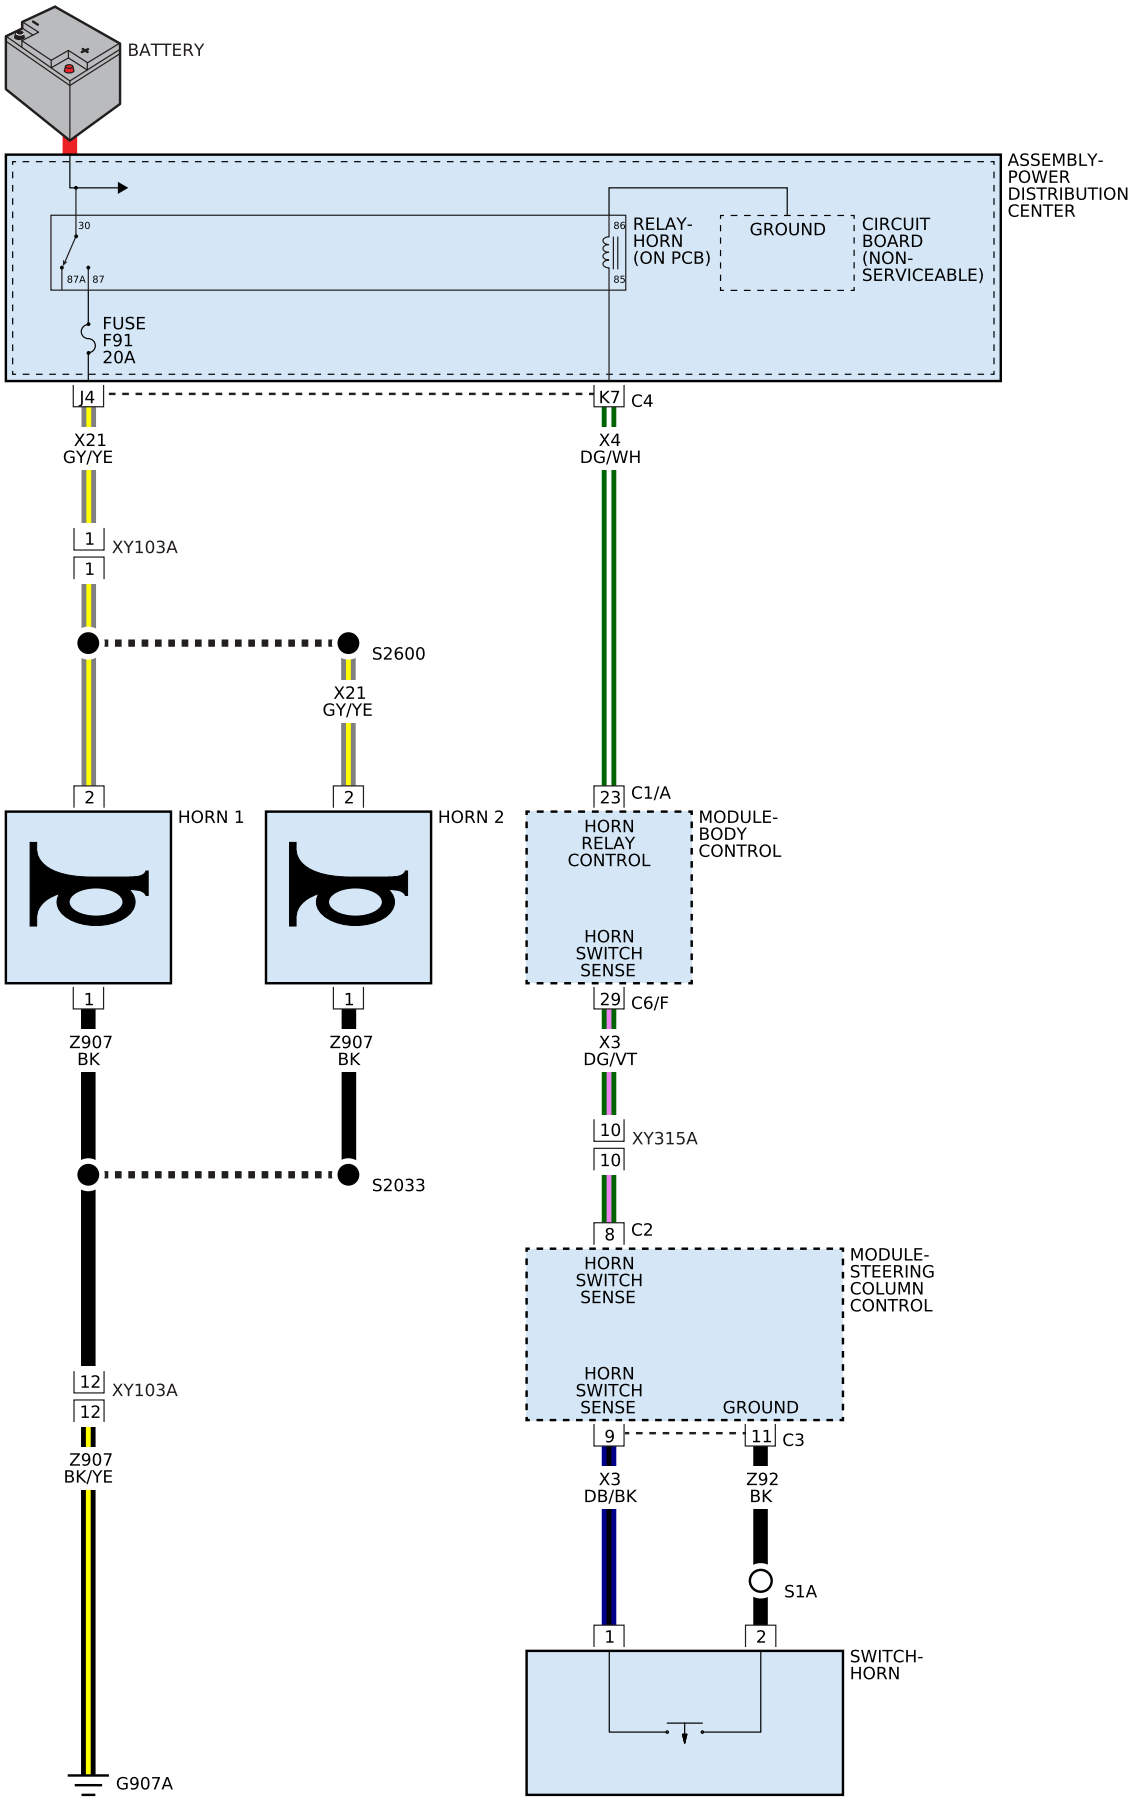
BATTERY
ASSEMBLY-
POWER
DISTRIBUTION
CENTER
30
87A
87
86
85
RELAY-
HORN
(ON PCB)
GROUND
CIRCUIT
BOARD
(NON-
SERVICEABLE)
FUSE
F91
20A
J4
K7
C4
X21
GY/YE
X4
DG/WH
1
XY103A
1
S2600
X21
GY/YE
2
2
23
C1/A
HORN 1
HORN 2
MODULE-
BODY
CONTROL
HORN
RELAY
CONTROL
HORN
SWITCH
SENSE
1
1
29
C6/F
Z907
BK
Z907
BK
X3
DG/VT
10
XY315A
10
S2033
8
C2
MODULE-
STEERING
COLUMN
CONTROL
HORN
SWITCH
SENSE
HORN
SWITCH
SENSE
GROUND
12
XY103A
12
9
11
C3
Z907
BK/YE
X3
DB/BK
Z92
BK
S1A
1
2
SWITCH-
HORN
G907A