


STANDARD PROCEDURE - FLUID DRAIN AND FILL

DRAIN

1. Raise and support the vehicle (Refer to 04 - Vehicle Quick Reference/Hoisting/Standard Procedure).
2. Remove the skid plate (Refer to 13 - Frame and Bumpers/Under Body Protection/PLATE, Skid, Front/Removal and Installation).
3. Place drain pan beneath the transfer case.
4. Remove the fill (2) and drain (1) plugs and allow the fluid to drain.

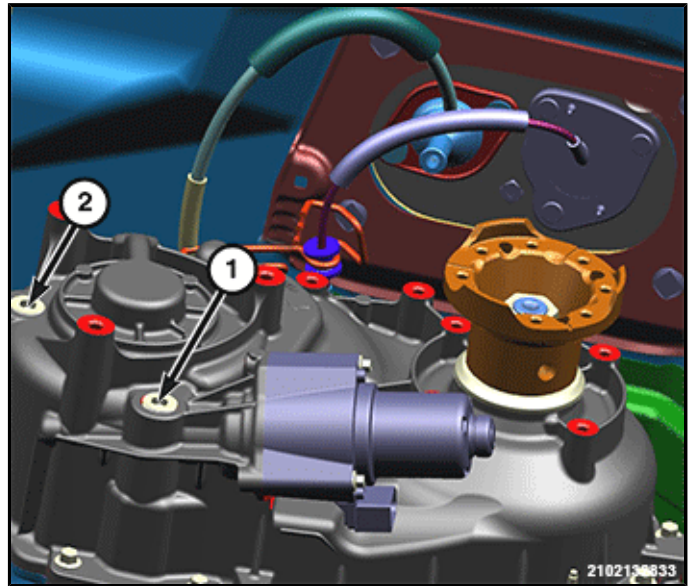

5. Install the drain plug and tighten it to the proper (Torque Specifications).

FILL

1. Fill the transfer case to the proper level using the specified fluid (Refer to 04 - Vehicle Quick Reference/Capacities and Recommended Fluids/Specifications).

2. Install the fill plug (2) and tighten to the proper (Torque Specifications).
3. Install the skid plate (Refer to 13 - Frame and Bumpers/Under Body Protection/PLATE, Skid, Front/Removal and Installation).
4. Remove the support and lower the vehicle.

