

03 - Differential and Driveline/Front Axle - M210/BEARING, Differential Side/Removal and Installation


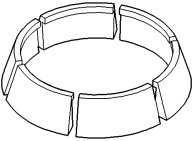
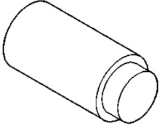
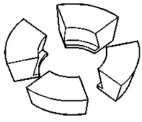
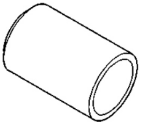
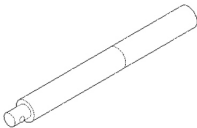

REMOVAL AND INSTALLATION

Labor Operations: Click to hide the list of LOPs associated with this procedure

No LOP information available for this service procedure.

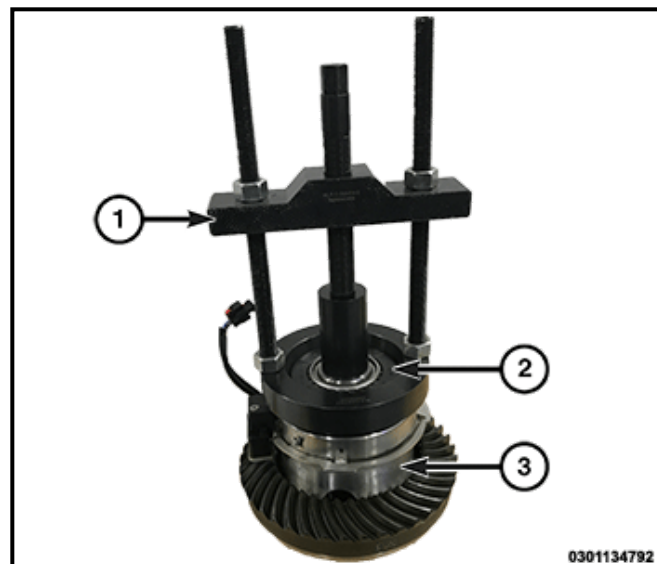
Special Tools: Click to hide the list of tools used in this procedure

[Click here to launch the form to order any tools you need.](#)

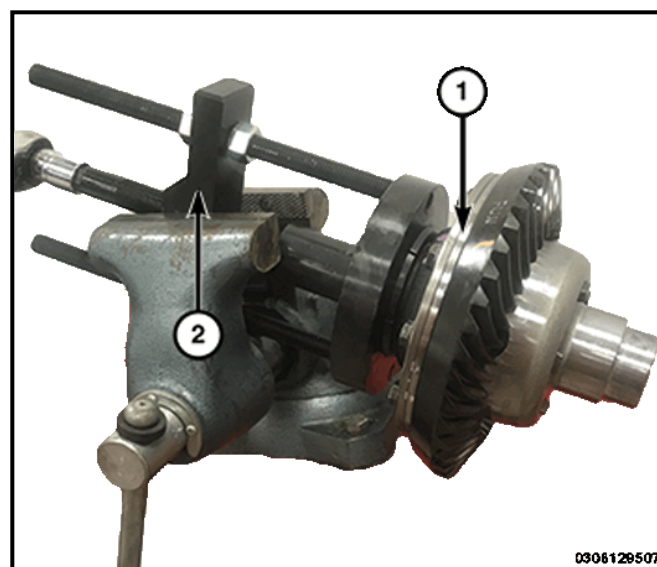
	<p>C-293-PA - Puller, Press</p> <p>Originally Shipped In Kit Number(s) 8418, 8837, C-293-M.</p>
	<p>C-293-62 - Block Set, Puller</p>
	<p>C-293-3 - Adapter, Bearing/Gear</p> <p>Originally Shipped In Kit Number(s) 8418, 8837, C-293-M, C-4246-AL, DD-914-CLT-L.</p>
	<p>C-293-42 - Block Set, Puller</p> <p>Originally Shipped In Kit Number(s) 9975.</p>
	<p>6761 - Installer, Ball Joint</p> <p>Originally Shipped In Kit Number(s) 6745, 8165CC.</p>
	<p>C-4171 - Driver Handle, Universal</p> <p>Originally Shipped In Kit Number(s) 9202, 9202A-CAN, 9202CC, 9299, 9299CC, 9299CC, 9300A-CAN.</p>
	<p>C-4213 - Installer, Bearing</p> <p>Originally Shipped In Kit Number(s) 9685, 9695, 9720-SUP, 9945-SUP2, 9995.</p>

REMOVAL

1. Remove the differential case from the axle housing (Refer to 03 - Differential and Driveline/CASE ASSEMBLY, Differential/Removal and Installation) .
2. Remove the flange side differential bearing using C-293-PA (1), Block Set, Puller C-293-62 (2) and C-293-3 .

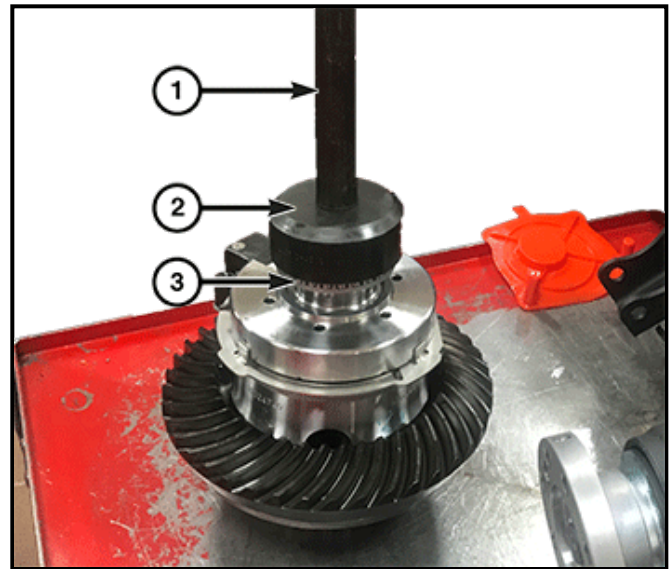


3. Remove the button side differential side bearing using the puller C-293-PA (2) with inserts Block Set, Puller C-293-42 in the puller and the adapter C-293-3 .

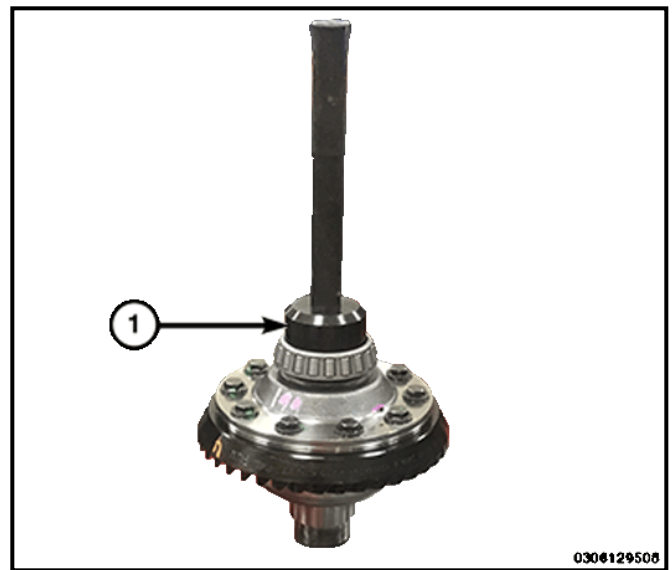


INSTALLATION

1. Install the flange side differential side bearing (3) using the Installer, Ball Joint 6761 (2) and C-4171 (1).



2. Install the button side differential side bearing using the Installer, Bearing C-4213 (1) and C-4171 .



3. Install the differential into the axle housing (Refer to 03 - Differential and Driveline/CASE ASSEMBLY, Differential/Removal and Installation) .